SRK-AO USER MANUAL Remote control LED Aquarium Light

SIROKA SI

remote LED aquarium light is a complicated, remote control led light which features multiple weather simulation options: sunrise, sunset, lightning,etc. With remote, advanced aquarists can create acustomized lighting for its own need. Please readthis manual carefully before using and follow strictlyin accordance with the manual.



For additional help, please contact us feel free!

SIROKA

1.PACKAGE INCLUDED:

- 1 x LED Light
- 1 x LCD 2.4G Remote Controller
- 1 x AC-DC Adaptor
- 2 x Metal Brackets
- 1 x User Manual

NOTE:

- If your DED light is missing any parts, please contact us directly with your order number.
- 2.For additional installation instrunctions and videos please visit our website.

SIROKA

2. INSTRUCTIONS

STEP 1- Remote LED Light Installation

- 1.Unpack light fixture and components.
- Slide the adjustable legs on the side of the light fixture to match the lengthof aquadum.

SIROKA


3.Set fixture on aquarium and ensure metal brackets fit snug on edges of aquarium-or-slide end of wire mounts into rimless tank brackets until they snap into place.

STEP 2- Remote Controller Installation

- 1.IMPORTANT: Plug-in light before mounting controller
- 2. Remove plastic cover from remote controller
- 3.Install 2 (AAA) batteries



STEP 3- Remote Light Overview

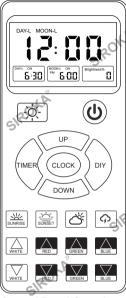

Control Panel Overview

RF Remote Controller: suitable for receiving and transmittingsignals at a distance in 10 meters, and can be remote controlled through the wall.

Switch button - Turns controller and light OFF/ON

Color -select color, red, green, blue, purple, orange, cyan, yellow. Long press 3 seconds to run RGB gradient cycle lighting

Up/Down- press to adjust brightness, DOWN adjust time, turn on/off DIY mode

TIMER Timer-press to program DAY-Light or MOON-Light time setting

CLOCK Clock-long press 3 seconds to chose 12H/24H, press up/down to select. Press to set local time, press to save and esc

DIY-press to program DIY mode DIY





Sunrise Simulate sunrise



Sunset Simulate sunset



Cloud Simulate cloud



Liahtnina Simulate lightning



White up turn up brightness of white



Red up turn up brightnes of red



Green up turn up brightness of green



Blue up turn up brightness of Blue



White down turn down brightness of white



Red down furn down brightness of red



Green down turn down brightness of green



Blue down turn down brightness of blue

STEP 4- Set local time

1.

Long press the CLOCK "12H" will begin flashing, the "12H" flash in the screen.

Then press up or DOWN button select either a 12H or 24H time display. press clock to save it



SIROKA

2.

Hold the CLOCK until you see "12H" flashes then press once cLock you will see the hour number flash, then press UP or DOWN to set the local time.

Press CLOCK the minute number will flash. then press up or DOWN to set the minute. Press once clock button to save





SIROKA



NOTE.

It will display"PM" on the screen when you choose "12H" time.



SIROKA

remote LED light controller features two timer functions:

- DAY-L/MOON-L mode for running a gradual sunrise, daylight, sunset, and moonlight programmed around a daily ON/OFF time.
- DIY mode for playing a custom scene with 8 sections ON/OFF time, selected light color and brightness.
- Weather mode for stimulating sunrise, sunset, cloudy, lightning storm, you can wish to view any on-demand dynamic mode.

1 DAY-L/MOON-L mode

1.DAY-L setting

① Press the TIMER button once "DAY-L ON" will begin flashing.



② Long press the TIMER button again to enter into edit mode. The "DAY-L ON" of hours number will flash, press up or DOWN to set the hour start time. Then press the TIMER button once, the "DAY-L ON" of minute number will flash, press up or DOWN to set the minute time.





③ Press the TIMER button to save the daylight start time, and the

brightness will flash, press



 




WRGB button

to set each light color's brightness.





Press the TIMER button once to save the brightness, and enter into set daylight off time, the screen will read "DAY-L OFF" flash. Then press the TIMER button to save, and the minute number will flash, press UP or DOWN to set the minute time.





 $\ensuremath{\mbox{\Large 5}}$ Press the $\ensuremath{\mbox{\tiny TIMER}}$ button to save the daylight off time.

DAY-L ON means the time of light turn on in the daytme.

DAY-L OFF means the time of light turn off in the daytime

When the time of DAY-L ON and the time of DAY-L OFF is the same, the screen display DAY-L OFF.

2.MOON-L setting

LOKA

To modify the moonlight ON and OFF time of the Standard timer, follow the next steps:

① Press the TIMER button twice the "MOON-L ON" will start flashing.



② Long press the TIMER button again to enter into edit mode.

The "MOON-L ON" of hours number will flash, press UP OF DOWN to set the hour start time. Then press the TIMER button once, the "MOON-L ON" of minute number will flash, press UP OF DOWN to set the minute time.





③ Press the TIMER button to save the moonlight start time, and the brightness will flash, press will flash, press will flash, press

to set each light color's brightness.



When you press the corresponding color(W,R,G,B) flashes on the brightness interface.

④ Press the TIMER button once to save the brightness, and enter into set moonlight off time, the screen will read "MOON-L OFF" flash. Then press the TIMER button to save, and the minute number will flash, press UP or DOWN to set the minute time.





SIROK

(5) Press the TIMER button to save the moonlight off time.



ATTENTION

All four LED's colors (white, red, green, blue) are adjustable in intensity in stepsfrom 0 to 25%, you can control the light intensity from very dim to extremely bright. 0% means no light.25% brightness of every single

color is the most bright of each light. It depends on how you arrange light color and brightness.



For example, you prefer 17% white and 10% blue light, then you can see 27% brightness at the display, and W for white, B for blue.

Press with all these button until the brightness display,

W R G B disappear. Then press to 17% brightness, Press to 27% brightness.



Press TIMER Once

Enter MOON-L ON will flash

Hold TIMER button

MOON-L ON hour number flashes press up or pown to set the time

Press TIMER Once

DAY-L ON hour number flashes press up or bown to set the time

Hold TIMER button

Press TIMER Once

MOON-L ON minute number flashes press up or pown to set the time

Press TIMER Once

MOON-L ON Brightness% flashes press

△ △ △ □ set light's color brightness

set light's color brightness

MOON-L ON hour number flashes

Press TIMER Once

press up or DOWN to set the time

Press TIMER Once

MOON-L ON minute number flashes press up or down to set the time

DAY-L ON minute number flashes press up or pown to set the time

Press TIMER Once

DAY-L ON Brightness% flashes press

set light's color brightness

Press TIMER Once

DAY-L ON hour number flashes press up or DOWN to set the time

Press TIMER Once

DAY-L ON minute number flashes press up or pown to set the time

3.DAY-L MODE & MOON-L MODE Default Program

Daylight ON:06:30am

Daylight OFF:18:00(06:00pm)


Color Spectrum: W 25%, R 25%, G 25%, B 25%. The intensity of lighting from 0% slowly ramps up in 15 minutes until 100% full spectrum.

SIROK

Moonlight ON:18:00(06:00pm) Moonlight OFF:23:30(11:30pm)

Color Spectrum: B 25%. The intensity of lighting from 0% faint blue light slowly ramps up in 15 minutes until 25% full blue.

Note: There is no need to set when selecting the Default Mode, just toset local time after out of the box and plugged in.

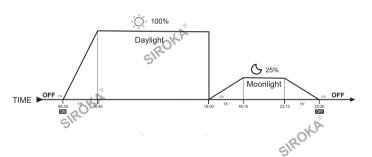


IY mode

1.DIY setting

SIROKA (1) Press and hold DIY until "DIY" flashing, then press UP or DOWN to turn on/off DIY mode. Press DIY once to enter setting. SIROKA

② After turned on DIY mode, you can see L1 displays on LCD screen,hour of L1 ON flash, you can press UP or DOWN to adjust hour of L1 ON. Press DIY again, minute of L1 flash, you can press UP or DOWN to adjust minute of L1 ON time.

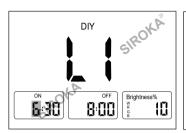



③ Press DIY again,hour of L1 OFF time flash,you can press UP or DOWN to adjust hour of L1 OFF time,press DIY again,minute of L1 flash,you can press UP or DOWN to adjust minute of L1 OFF time.





④ Then press DIY, Brightness flashing you can press to increase or decrease the brightness of four colors.



(5) Press DIY to set L2, L2 ON time is the L1 OFF time, and so on for L3-L7,so you just need to set L2 OFF time, the hour of L2 OFF time flash,you can press UP OF DOWN to adjust hour of L2 OFF time, press DIY, the minute of L2 OFF time flash,you can press UP OF DOWN to adjust minute of L2 OFF time.








That so on to finish setting L7. The start time of L8 is the end time of L7, and the end time of L8 is one minute before the start time of L1, pleasenote that L1-L8 must be set for the whole 24 hours in DIY mode.



2.DIY Mode Default Program Color Spectrum:WRG 15%.sunrise I 1 6:30-8:00 12 Color Spectrum: WRGB 60% 8:00-10:00 L3 10:00-15:00 Color Spectrum: WRGB 100% 14 15:00-17:00 Color Spectrum: WRGB 60% L5 17:00-18:30 Color Spectrum: W2%, R10%, G3%, B0%, sunset 16 18:30-20:30 Color Spectrum:B 25% Color Spectrum:B 4% L7 20:30-22:00 L8 22:00-6:29 Color Spectrum:0% SIROKA SIROKA -) 100% In the day TIME SIROKA

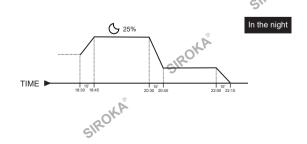

3.Weather Mode

You can press any of these weather button







which simulates sunrise, sunset, cloudy and lightning storm mode.

You'd have to press (b) button manually turn the weather off.

Otherwise, it will last until the ON time of DAY-L or MOON-L or L1.

For example:

When the lights are running in DAY-L/MOON-L mode, then you press sunrise button at 8 a.m., the lights will slowly ramps up to full bright in 30 minutes. If you don't turn off the weather mode manually, it will stay on, until the 18:00 the light turns into blue light. At this time, the light runs on default day light moon light mode.

- Sunrise: Enabled by a without on the remote. The lights start gradient orange lights slowly ramps up to 100% full spectrum. Sunrise Color Spectrum: R25%+G3% slowly ramps up to color spectrum B 25%, W 25%, R 25%, G 25%.
- Sunset: Enabled by a sufficient button on the remote. The lights start 100% full spectrum slowly ramps down to orange lights until the light off. Duration 30 minutes.

Sunset Color Spectrum: B 25%, W 25%, R 25%, G 25% slowly ramps down to color spectrum B 0%, W 0%, R 0%, G 0%.

· Cloudy: Enabled by a 🎳 button on the remote. It is a non-adjustable color setting that is mostly blue and not very bright.

Color Spectrum: W1%+R1%+B4%+G2%

· Lightning Storm: Enabled by a Dutton on the remote.

The lightning flash is set to last for 2 seconds before returning back to dark clouds, then reciprocating cycle.

Color Spectrum: W1%+R1%+B3%+G3%.

Model	SRK-AO30	SRK-AO45	SRK-AO60	SRK-AO75	SRK-AO90	SRK-AO120
Input	AC100-240V					
Output	DC20V					
Power	18W	24W	30W	36W	42W	58W
White LED	32	54	64	74	84	130
RGB LED	24	36	48	60	72	96
Purple LED	4	5 ₆	8	10	12	14
Light Size (without brackets)	10.8"	16.7"	22.6"	28.5"	34.4"	46.2"
Application	12"-18"	18"-24"	24"-30"	30"-36"	36"-42"	48"-54"
Power Cord	4.9ft+2.3ft					
Color Temp	6000-10000K					
Render Index	89					
Lumens	1000	1600	2100	2700	3100	3600

4. Maintenance

For maximum LED performance, it is recommended that the fixture be cleaned on a weekly basis. Unplug transformer prior to cleaning the light fixture and remove from aquarium. Wipe exposed surfaces carefully with a damp cloth to remove any dust or mineral deposits that may collect over time. Do not use detergents or harsh cleaners as it can damage the light fixture.

5.Troubleshooting

- Light stopped working, please check the remote control batteries.
 Replace it if it is run out of battery. If still not working, please contact us to get a new power supply. Maybe the power supply damaged.
- Light is not response to remote, unplug the light, take out the battery
 on the remote. Then put it back and plug in light, press on/off button to
 match with light.

PS:The step of taking out the battery would restore factory setting. You have to reset the light again.



Memory Function

If power failure, the light turns on at 100% full spectrum once restore. Then the light will revert back to the previous mode within one hour.

Restore Factory Default Settings

Take out the battery, you need to manually unplug the power adapter to turn off the light, reinstall the battery and reset the aprogram.

6.IMPORTANT SAFETY INSTRUCTIONS

1 N

 
Warning: To guard against injury,basic safety precautions should be observed,including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- ① You should read all the important notices on the appliance before using. Failure to do so may result in loss of fish life or damage to this appliance.
- ② Danger: to avoid possible electric shock, special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations, do not attempt to repair by yourself. Return the appliance to an authorized service facility for service or discard the appliance.
 - Carefully examine the appliance after installation. Do not operate
 any appliance if it has a damaged cord or plug, or if it is malfunctioning
 or it is dropped or damaged in any manner. The power cord of this
 appliance cannot be replaced. If the cord is damaged, the appliance
 should be discarded. Never cut the cord.
 - To avoid the possibility of the appliance plug or receptacle to one side of a wall mounted receptacle to prevent water from dripping on to thereceptacle or plug. A "drip loop" (see illustration) should be arranged by the user for the cord connecting appliance to a receptacle. The drip

EIROKI

loop is that part of the cord below the level of the receptacle or the connector if an extension cord is used to prevent water travelling along the cord and coming in contact with the receptacle. If the plug or receptacle does get wet, do not unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the appliance. Then unplug and examine for presence of water in receptacle.



- 3. This appliance is not intended for use by persons(including children) with significantly impaired physicalor mental capabilities, unless they have been given supervision or instruction concerning the use of theappliance by a person responsible for their safety. Children should always be supervised to ensure that they do not play with the appliance.
- ④ To avoid injury, do not touch moving parts or hot parts.
- ⑤ CAUTION-Always unplug or disconnect all appliances in the aquarium from electricity supply before placing hands in water,before putting on or taking off parts and while the equipment is being installed, maintained or handled. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect. Always unplug an appliance from an out letwhen not in use.
- ⑥ Do not install or store the appliance where it will be exposed to weather or temperatures below freezing. For indoor household use only. Do not immerse.
- ⑦ Make sure the appliance is mounted correctly and securely positioned on the aquarium before operating the appliance.
- 8 If an extension cord is necessary, a cord with proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled. The connection should be carried out by a qualified electrical installer.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in are sidential installation. This equipment generates, uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio ortelevision reception, which can be determined by turning the equipment offand on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This transmitter must not be co-located or operating in conjunction with anyother antenna or transmitter.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for anuncontrolled environment. This equipment should be installed and operated with minimum distance of 8 inches (20cm) between the radiator & your body.

8. One Year Limited Warranty

This product MUST be purchased from an authorized reseller. Visit our website for a list of unauthorized resellers.warrants this product against defects in materials and worksmanship for ONE (1) YEAR from the date of original retail purchase and is none transferable. Warranty on all Products, including Aquariums, is limited to replacement of the product and does not cover fish loss, personal injury, property loss-or direct, incidental or consequential damage arising from the use of this product.

Note: One-year Limited Warranty does not cover damage caused by the following: improper installation, saltwater corrosion, electrical surges, or modifications.

If you discover a defect, please contact who will, at it's option, repair or replace the product at no charge to you, rovided you return it during the warranty period. A copy of the bill of sale is required as proofof original purchase date in the event the product needs repairs within the warranty period. does not warrant any products that are not

This warranty does not apply if the producthas been damaged by accident , abuse , misuse or misapplication or if the product has been modified without the written permission of.

9. DISPOSAL

Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary. This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances.

By collecting and recycling waste, you help save

natural resources and make sure theproduct is disposed in an environmental friendly and healthy way.



SIROKA

SIROKA

Thank you for Choosing SIROKA Aquarium Light Making aquarium keeping easier one product at a time

SIROKA

SIROKA

If you have any problems or suggestions for our this Aquarium Light, please contact us by email before leaving feedback or opening a case, as it will be the fastest way to solve your problem. If you are satisfied with our products, please leave positive feedback in order to let more customers enjoy it. Thank you again!

SIROKA

SIROKA